

## Evolution Corded Tracks - H750 & H850

### Bracket Fittings

**1**

Secure the brackets to the wall using all brackets supplied. Loosen screw (a) ensuring the plastic clip can slide freely.

**2**

Position the track in the holding point on the bracket then push the track up until it snaps into place. Tighten screw (a) firmly to secure in position.

**3**

Adjust the track to the required distance from the wall and secure by tightening screw (b).

### Bracket Fittings (Top Fix)

For top fix remove the angle bracket and use top plate only.

### Cut to length

**1**

Loosen screw (c) and remove the end pulley assembly from the profile.

**2**

Remove the cord from the channels in the profile. Measure and cut the profile to size ensuring the cord is not cut. Remove any unwanted gliders remembering to remove the same amount from the other side of the track.

**3**

Refit the cord back in the cord channels and slide the end pulley assembly back onto the profile. Secure by tightening screw (c).

### Wave Track - H850

When discarding wave gliders take the last unwanted glider and remove small cord anchor button from the top of this glider. Trim unwanted cord close to button leaving button attached to the last required glider. Attach this button to pulley assembly by looping cord around metal peg (d) as shown above.

## WARNING

Children can strangle if this safety device is not installed. Always use this device to keep cords and chains out of the reach of children.

### Cord Tensioner

**1**

To ensure child safety compliancy, attach the cord tensioner to the wall ensuring point (d) in no less than 150cm from the floor.

**2**

Pull the shaft out of main body to expose small hole. Insert suitable pin into the hole to keep the tensioner in this position. Fit the cord around the wheel.

**3**

Pull cord retaining collar from master carrier and continue to remove all slack from the draw cord. Loosen the grub screw on the collar and reposition collar close to master carrier. Retighten grub screw and trim off unwanted cord.

**4**

Remove the pin so the tensioner holds the cord tight and at least 150cm from the ground.

