

INSTALLING A TENSION PULLEY

Issue 3: July 2017

The Tension Pulley must be fitted 1m below the Headrail if fitted by a homeowner or 1.5m from the floor if fitted by a professional fitter. It is the responsibility of the person fitting the Tension Pulley to ensure that it is fitted in the correct position

 
Step 1

Measure the position of the Tension Pulley and fit it using the two screws provided with the device




Step 2

Extend the neck of the pulley and secure in the higher position using a pin or small nail to hold it in position. Remove the central barrel by pulling it down and then out. Place the cord loop inside the head of the Pulley and re-fit the central barrel, ensuring that it clicks firmly into place

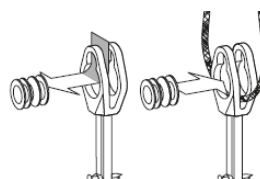

Step 3

 Go to the Masterslide with the knotted cord ends and gently pull one of the cords to take up the slack and reduce the length of the cord loop. Tie a knot in the cord. Remove the pin or nail holding the Tension Pulley in the extended position. The cord should now be fully tensioned. Only cut the excess cord in front of the knot when you are sure that the cord is correctly tensioned

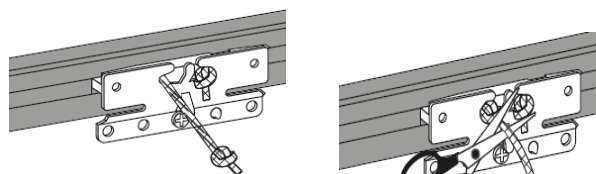

Step 4

If the cord becomes twisted rotate the head of the pulley to remove the twist



WARNING

Young children have been strangled by loops in pull cords, chains, tapes and inner cords that operate the product. To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords. Do not tie cords together. Make sure cords do not twist and create a loop.



6064L/0301

Children have been strangled if this safety device is not installed. Always use this device to keep cords or chains out of reach of children.

6063L